

Преди евро 3

	1.6 TS	1.8 TS	2.0 TS	2.5 V6	1.9 JTD	2.4 JTD
Opening starts (° C)	81 - 85	81 - 85	81 - 85	85 - 89	78 - 82	78 - 82
Maximum opening (° C)	101 - 105	101 - 105	101 - 105	97 - 101	86 - 90	86 - 90
Valve travel (mm)	>9.5	>9.5	>9.5	>7.5	>7.5	>7.5

Евро 3

	1.6 TS	1.8 TS	2.0 TS	2.5 V6	1.9 JTD	2.4 JTD
Opening starts (° C)	81 - 85	81 - 85	81 - 85	85 - 89	78 - 82	78 - 82
Maximum opening (° C)	101 - 105	101 - 105	101 - 105	97 - 101	86 - 90	86 - 90
Valve travel (mm)	>9.5	>9.5	>9.5	>7.5	>7.5	>7.5

От 02/02

	1.6 TS	1.8 TS	2.0 JTS	2.5 V6
Opening starts (° C)	81 - 85	81 - 85	-	85 - 89
Maximum opening (° C)	101 - 105	101 - 105	-	97 - 101
Valve travel (mm)	>9.5	>9.5	-	>7.5

	3.2 V6	1.9 JTD	2.4 JTD
Opening starts (° C)	-	78 - 82	78 - 82
Maximum opening (° C)	-	86 - 90	86 - 90
Valve travel (mm)	-	>7.5	>7.5

Or 10/02

	1.6 TS	1.8 TS	2.0 JTS	2.5 V6
Opening starts (° C)	81 - 85	81 - 85	-	85 - 89
Maximum opening (° C)	101 - 105	101 - 105	-	97 - 101
Valve travel (mm)	>9.5	>9.5	-	>7.5
	3.2 V6	1.9 JTD	1.9 JTD 16V	2.4 JTD
Opening starts (° C)	-	78 - 82	78 - 82	78 - 82
Maximum opening (° C)	-	86 - 90	86 - 90	86 - 90
Valve travel (mm)	-	>7.5	>7.5	>7.5

Or 06/03

	1.6 TS	1.8 TS	2.0 JTS	2.5 V6
Opening starts (° C)	81 - 85	81 - 85	-	85 - 89
Maximum opening (° C)	101 - 105	101 - 105	-	97 - 101
Valve travel (mm)	>9.5	>9.5	-	>7.5
	3.2 V6	1.9 JTD	1.9 JTD 16V	2.4 JTD 20V
Opening starts (° C)	-	78 - 82	78 - 82	78 - 82
Maximum opening (° C)	-	86 - 90	86 - 90	86 - 90
Valve travel (mm)	-	>7.5	>7.5	>7.5